



No.	Description	Code Number	Qty
1	Right Housing	EZHS-BLUE	1
2	Left Housing		
3	Switch Knob	EZ-03	1
4	Spring	40U-10	1
5	Switch Rod	EZ-04	1
6	Release Lever	EZ-07	1
7	Lever Support	EZ-06	2
8	Switch Unit	EZ-05	1
9	Spring	EZ-08	1
10	M4 x 12Screw	P500-28	6
11	M4 x 20Screw	558-01	4
12	Strap	558-07	1
13	Power Unit	EZ-09	1
14	S-32 O-Ring	EZ-10	1
15	Oil Reservoir	EZ-11	1
16	S-36 O-Ring	EZ-12	1
17	Bush	R14A-19	1
18	1/8" Steel Ball	40-20	1
19	M4 x4 Screw	85-47	1
20	Cylinder Insert	EZ-13	2
21	P6 Back-Up Ring	UC-28	2
22	PS-6 Pent Seal	EZ-14	2
23	Pump Piston	EZ-15	2
24	Piston Spring	EZ-16	2
25	Release Valve Stem	EZ-17	1
26	P3 O-Ring	16-36	2
27	Reservoir Plug	EZ-18	1
28	S3 O-Ring	7R-17	1
29	SI - Ring	R14A-23	2
30	Filter	EZ-19	2
31	Suction Valve	EZ-20	2
32	P3 O-Ring	EZ-21	2

No.	Description	Code Number	Qty
33	5/32" Steel Ball	22-21	3
34	Spring	EZ-22	2
35	M3 x5 Screw	UC-37A	1
36	Spring	EZ-23	1
37	P3 Back-Up Ring	9H-38	1
38	Release Plug	EZ-24	1
39	Valve Cartridge	EZ-25	1
40	P5 O-Ring	5N-35	1
41	3/16" Steel Ball	16-49	2
42	Valve Spring	EZ-26	2
43	Valve Seat	EZ-27	2
44	Pump Body	336-44	1
45	P28 O-Ring	EZ-29	1
46	P28 Back-Up Ring	55D-03	1
47	Ram	336-47	1
48	Ram Spring	336-48	1
49	Cover	336-49	1
50	Head Cover	336-50	1
51	Fixed Blade	336-51B	1
52	Snap Ring	336-52	4
53	Pin	336-53	2
54	Screw	336-54	1
55	Nut	336-55A	1
56	Washer	336-56A	1
57	Snap Ring	336-57	4
58	Connecting Plate	336-58	2
59	Moveable Blade	336-59B	1
61	Pin	336-61	2
62	Washer	336-62A	2
63	Center Bolt Assembly	336-63B	1
64	Magnet	336-64	1