


MODEL S-20 PARTS DIAGRAM

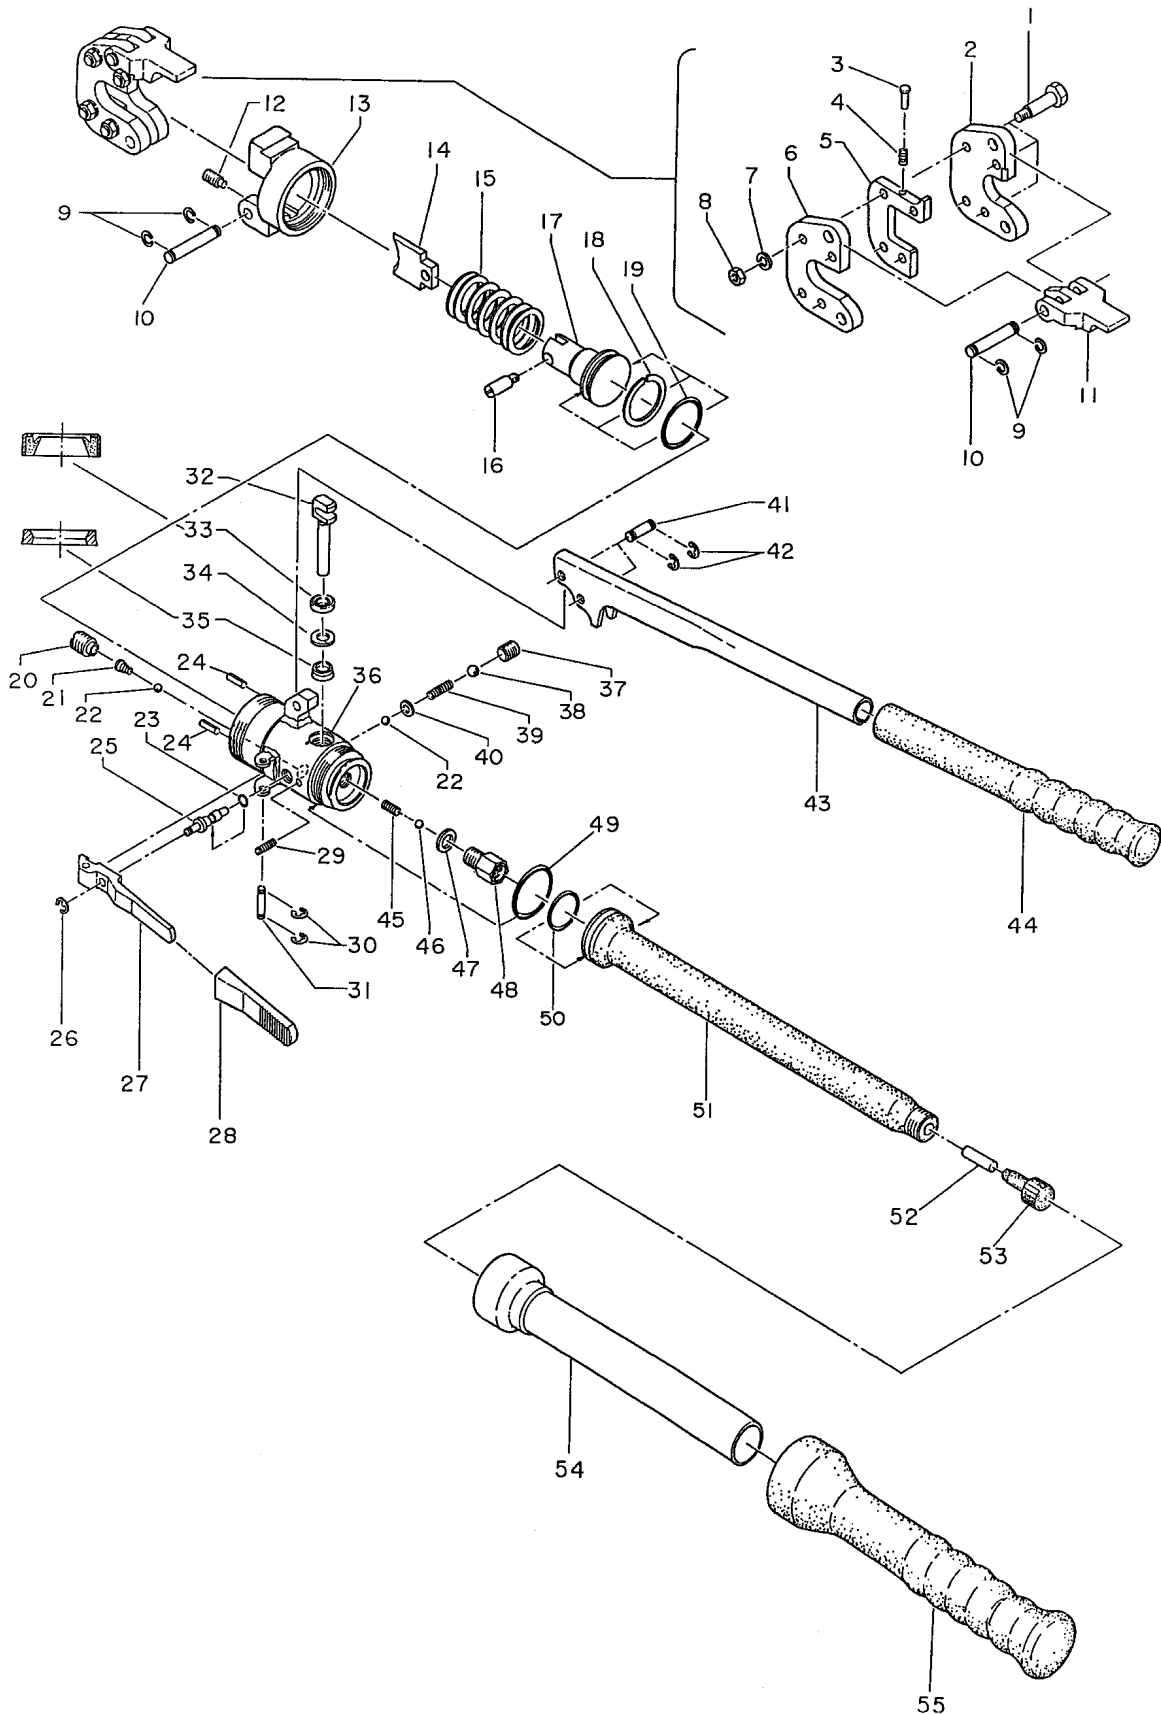

MODEL S-20 PARTS LIST

NO.	DESCRIPTION	CODE	QTY.	NO.	DESCRIPTION	CODE	QTY.
1	Shoulder Bolt	16-03B	4	49	S-36 O-Ring	85-51	1
2	Head Shear	20-02	1	50	P-26 O-Ring	16-55	1
3	Slide Pin	20-71	1	51	Oil Reservoir (4)	20A-03	1
4	Spring (144)	85-37	1	52	Magnet	ROB-25	1
5	Spacer	20-70	1	53	Reservoir Cap	410-55	1
6	Main Head	20-04	1	54	Body Handle	16-63	1
7	M6 Lock Washer	16-02	4	55	Body Handle Grip	20-11	1
8	M6 Hex. Nut	16-01	4				
9	CE-8 Snap Ring	16-09	4				
10	Pin (46)	16-10	2				
11	Latch	16-11	1				
12	M5 X 10 Screw (D.P.)	55A-11	1				
13	Body Head	20A-01	1				
14	Blade	20-07	1				
15	Spring (75)	16-17	1				
16	Blade Screw	16-19	1				
17	Ram	16-21	1				
18	P-29 Back-Up Ring (B.C.)	16-22	1				
19	P-29 O-Ring	16-23	1				
20	Valve Screw (3)	16-24	1				
21	Spring (2)	16-25	1				
22	7/32" Ball	16-26	2				
23	P-3 O-Ring	16-36	1				
24	2.5 X 10 Dowel Pin (D)	40A-03	2				
25	Release Valve Stem	16-35	1				
26	E-3.2 Snap Ring	16-33	1				
27	Release Lever	20-08	1				
28	Release Lever Insulation	20-09	1				
29	Spring (77)	16-37	1				
30	E-2.5 Snap Ring	16-28	2				
31	Pin (26)	16-27	1				
32	Pump Piston	16-47	1				
33	VC8 Oil Seal	40A-05	1				
34	P-8 Back-Up Ring (B.C.)	85-33	1				
35	PS-8 Pent Seal	16-44	1				
36	Body	20A-02	1				
37	M10 X 10 Screw (F.P.)	16-41	1				
38	9/32" Ball	16-40	1				
39	Spring (76)	16-39	1				
40	M3 Flat Washer	16-38	1				
41	Pin (47)	16-29	2				
42	CE-6 Snap Ring	16-30	4				
43	Pump Handle	16-31	1				
44	Pump Handle Grip	20-10	1				
45	Spring (4)	16-48	1				
46	3/16" Ball	16-49	1				
47	Copper Gasket (6)	16-50	1				
48	Suction Valve Screw Ass'y	16-51	1				